

Descriptions:


This product is mainly designed for public occasions such as conference, speech, broadcast, record etc. The unique preceding melody clew function and ring lamp indicates, and with high fidelity circuitry, high electret head, can achieve multi-functional, new appearance, high quality functions.

Operation Instruction:

- 1.Connect with the audio line, and connect amplifier with MIC jack.
- 2.Adjust amplifier MIC volume to “ O” position, then connect with external power supply.
- 3.Press MIC switch, then the ring lamp will be light, then the MIC can work.Speak to the MIC and adjust the MIC volume on amplifier at the same time until the perfect sound available. there is a preceding melody switch on the base board, there is MIC adjustment knob, can adjust to suitable volume.

Attentions:

Please with drwal the battery if no chime output due to the Mic build-in processor, it can be used when you insert the battery after 10 Seconds.

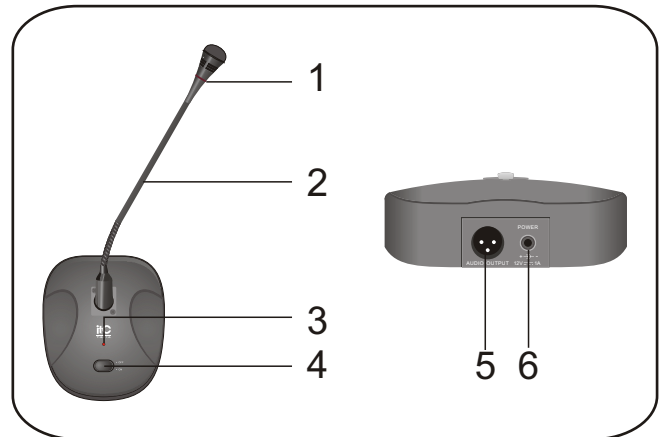

Functional:

- 1.MIC
- 2.MIC Pole
- 3.Power Indicator
- 4.Power Switcher
- 5.Audio output
- 6.Power Input

Technical Parameters:

Capsule Type	Condenser
Polar Pattern	Cardioided
Frequency	40-16000Hz
Sensitivity	-43±2dB
Power Supply	AC 12V
Dimension	150X400mm
Weight	1.1Kg